Black Pantone 2925 C

Meet your new

VGN-U750P

Thank you for purchasing a Sony VAIO® computer! Your new computer is a superb blend of high technology and easy-to-use functionality. The information provided here is designed to help you to become familiar with your computer.

- A Main unit
- B Port replicator
- C Holder
- D Protective pouches
- E Power Cord
- F AC Adapter
- G Battery
- H Keyboard
- I Stylus and strap
- J Stick Remote Commander and ear set
- K Ear pieces (2 sets)
- L Multi-pointer replacement caps (for keyboard only)
- M Display/LAN adapter

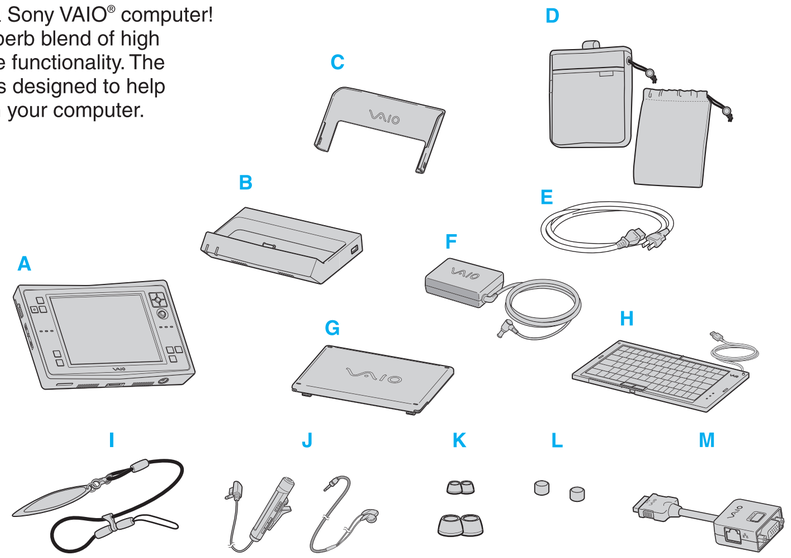

Connect the Battery and AC Adapter to the Computer

1. Slide the LOCK lever on the top of your computer in the reverse direction of the arrow.
2. Insert the tabs on the battery diagonally into the notches on the computer.
3. Lower the other side of the battery towards the computer and push it in until the Release switch clicks into place.
4. Slide the LOCK lever in the direction of the arrow to secure the battery on the computer.
5. Connect the AC adapter to the computer. The computer automatically charges the battery.
6. Turn on the computer by sliding the POWER switch in the direction of the arrow.

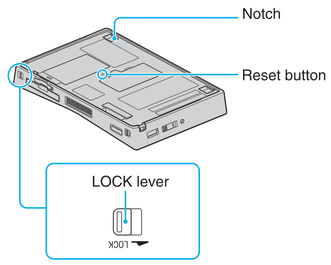

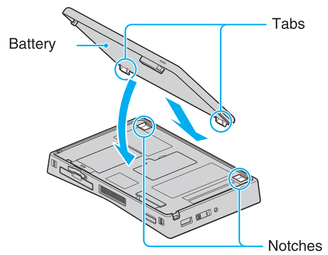

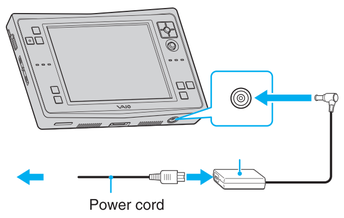

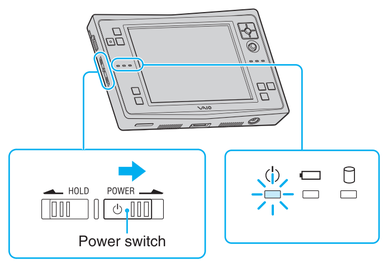

2-548-341-01 © 2004 Sony Electronics Inc. All rights reserved. Printed in Japan.

LEFT

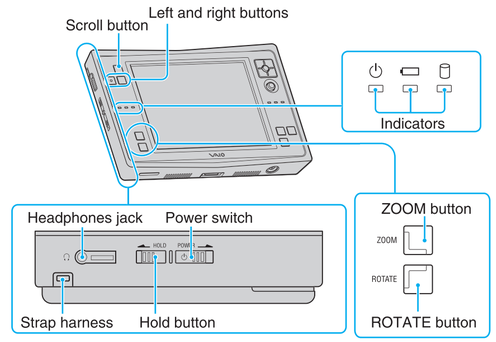

RIGHT

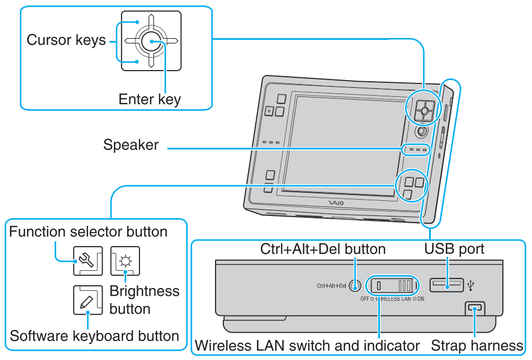

TOP

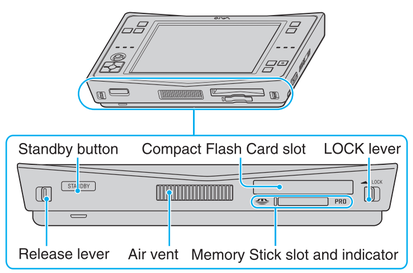

BOTTOM

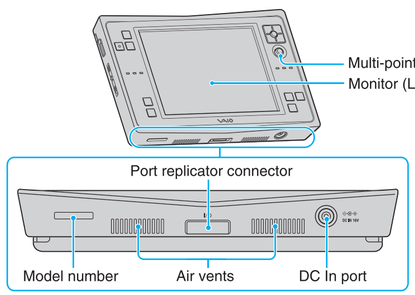

PORT REPLICATOR (FRONT)

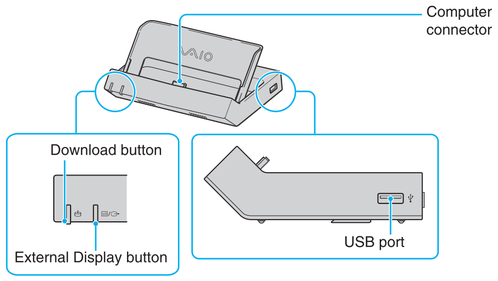

PORT REPLICATOR (BACK)

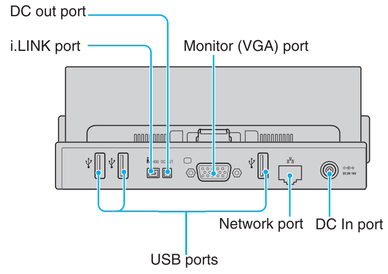

Connect the Port Replicator

1. Disconnect all peripherals from the computer.
2. Plug the power cord into the AC adapter and an AC outlet.
3. Plug the cable attached to the AC adapter into the DC In port on the port replicator.
4. Insert the holder into the port replicator until the lines on the holder are levelled with the port replicator surface.
5. Slide the computer gently into the holder, fitting the guide rails of the holder into the grooves on the battery.

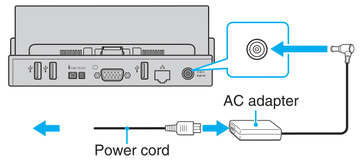

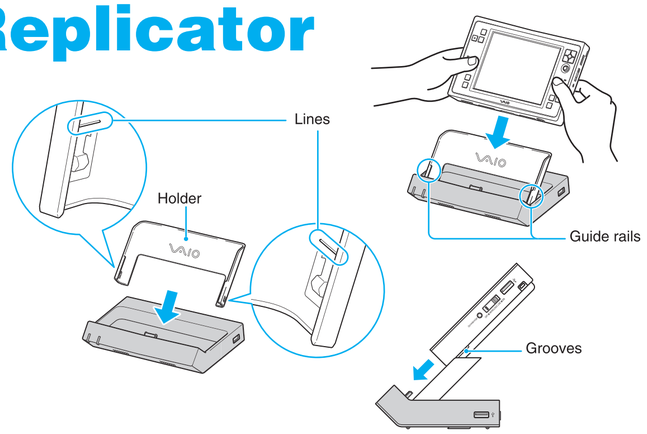

Connect the Keyboard

1. Slide the lock lever on the folding keyboard to the UNLOCK position and open the keyboard.
2. Connect the keyboard to one of the USB connectors on your computer or the port replicator.

   Note: The cap on the keyboard's multi-pointer will wear out over time. When it wears out, replace it with one of the supplied spare caps.

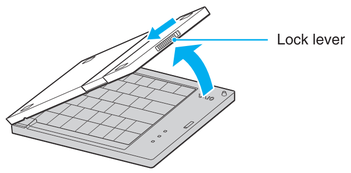

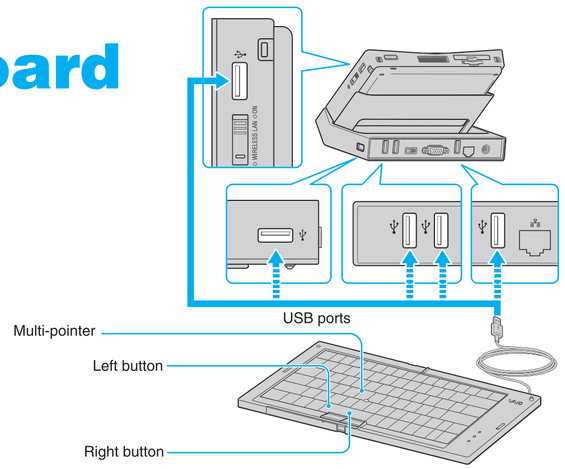

Use the Stick Remote Commander

Your computer comes with a remote commander in order to make great use of the Windows Media Player software.

1. Connect the ear set to the remote commander and to your computer as illustrated. Make sure that the HOLD switch on the remote commander is off.
2. The supplied ear set comes with the medium-sized ear pieces attached. If the ear pieces do not fit comfortably, replace them with the supplied large- or small-sized ear pieces.
3. Raise and slide the clip in the direction of the arrows to remove it from the remote commander.
4. Turn around the clip and attach it back to the remote commander.
5. Launch Windows Media Player to control it with the remote commander. Click **Start** > **All Programs** > **Windows Media Player**.

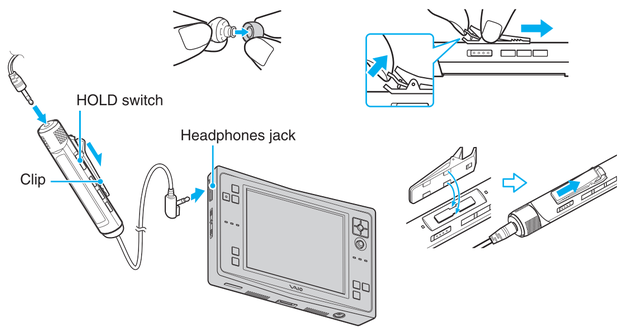

Locate the User Guide

The online VAIO® Computer User Guide offers you more valuable information about your new computer. Once your computer is up and running, you can find the guide by following these instructions.

1. Click **Start** > **VAIO Help and Support**.
2. Under **Pick A Help topic**, click **VAIO User Guide**.

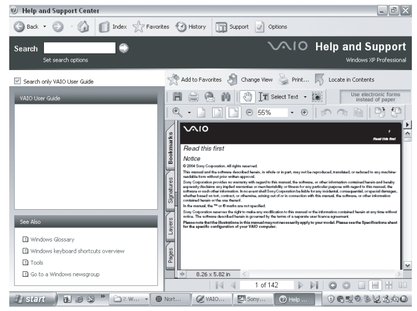

What do I do if my computer stops responding?

Although unsaved files may be lost, it is best to turn off your computer by following these steps:

Click **Start** > **Turn Off Computer** > **Turn Off**.

Alternatively, you may follow one or more of these suggestions to turn off the computer:

- Press the Ctrl+Alt+Delete keys simultaneously. Select the **Shut Down** menu, and click **Turn Off**. This option is particularly useful if your computer stops responding while you are playing a CD or DVD.
- Press and hold the power button until the computer turns off.
- Disconnect the AC adapter and remove the battery.

What do I do if my computer won't start?

The power indicator on the computer is off when the computer is not securely attached to a source of power. Make sure the computer is plugged into the AC adapter and the adapter is plugged into an outlet. If you are using battery power, make sure the battery is inserted properly and charged. You may check the power source by disconnecting the AC adapter and removing the battery. Wait one minute before reattaching the AC adapter and reinserting the battery. Additional suggestions include:

- If the computer is plugged into a power strip or uninterruptible power supply (UPS), make sure the power strip or UPS is turned on and working.
- If your computer is connected to an external display, such as a multimedia monitor, make sure the display is plugged into a power source and turned on. The brightness and contrast controls may need to be adjusted. See the guide that came with your display for more details.
- If the computer is starting from a floppy disk, eject the disk from the floppy disk drive (if applicable).
- If you notice condensation on the computer, do not use the computer for at least one hour. Condensation may cause the computer to malfunction.

To set up a wireless connection

A wireless local area network (LAN) is a network in which you can connect through a wireless (radio) connection. You can opt to purchase a Sony Wireless LAN Access Point to set up a LAN.

1. Make sure an access point is set up. (See the instructions that accompanied the access point.)
2. Move the Wireless switch to ON.
3. Select the **Enable Wireless LAN** option in the Wireless Device Switch window, and click **OK**.
4. Click **Start** > **All Programs** > **VAIO Wireless Utility**.
5. Follow the steps provided by the VAIO Wireless Utility.

VAIO Wireless Utility
VAIO Assistant
Be taken step-by-step through the connection process.
Diagnostics
Check for issues preventing you from connecting to your wireless network.
Wireless Guide
View instructions for setting up a wireless connection.
Exit

To register your computer

You are prompted to register your computer the first time you turn on the unit. Follow the on-screen instructions to complete the registration process. If you are not able to register your computer during the first session, you are provided with additional registration opportunities later. You can also register your computer online at http://www.sony.com/vaioregistration.

Take advantage of Sony's commitment to quality customer support and receive these benefits by registering your computer:

Sony Customer Support — Talk to a support representative to troubleshoot problems you may have with your computer.

Product Information Notification — By giving Sony your contact information, you will enable Sony to reach you regarding performance updates and upgrades.

Refer to the following Web sites for additional information about your computer.

- http://www.vaio.net
- http://www.sonystyle.com
- http://www.sony.com/pcsupport